

Sômatik Labs®



SLS-UVB05

Ultraviolet Sanitiser Bag

USER MANUAL

CONTENTS

1.0	BEFORE USE	3
2.0	IMPORTANT SAFETY INSTRUCTIONS.....	3
3.0	KEY FEATURES.....	4
4.0	TECHNICAL SPECIFICATIONS.....	5
5.0	PACKAGE CONTENTS	5
6.0	PRODUCT OVERVIEW.....	6
7.0	HOW TO USE YOUR SOMATIK LABS SLS-UVB05 ...	6
7.1	Quick Clean - 3 minute Mode	7
7.2	Deep Clean - 10 minute Mode	8
8.0	INBUILT SAFETY SWITCH.....	8
9.0	WARRANTY TERMS & CONDITIONS	9
9.1	Indemnity.....	10
9.2	Warranty and Warranty Disclaimer	10
10.0	NOTES	15

1.0 BEFORE USE

The Somatik Labs SLS-UVB05 Ultraviolet Sanitiser Bag has been carefully developed to easily clean and disinfect everyday personal items. It is important to follow the included instructions to ensure effective removal of up to 99.9% of germs and bacteria.

Please open and check the contents carefully before use and perform all installation and operating instructions as per this user manual. In case of any damage or operation problem please contact Somatik Labs service department (refer page 9).

2.0 IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE - PLEASE SAVE THESE INSTRUCTIONS

DANGER – to reduce the risk of electric shock:

- Do not place or store the UV sanitiser where it can fall into or be pulled into a tub or sink.
- Do not place in or drop into water or other liquids.

WARNING – to reduce the risk of burns, fire, electric shock or injury:

- This product features a built-in safety mechanism to reduce the risk of exposure to UV-C ultraviolet radiation. It is important that you use the device with the zipper completely closed.
- Do not attempt to look directly at the UV-C LED's while the unit is on. UV light can be damaging to the eyes and skin.
- Do not attempt to modify this product, it has been designed to contain UV exposure.

- Do not expose the device to fire or excessive temperature.
- Please follow all charging instructions and do not charge the device outside of the temperature range specified.
- Charging improperly or at temperatures outside of the specified range may increase the risk of fire.
- Product operating & charging range: 0°C - 50°C.

3.0 KEY FEATURES

UV-C Technology: Ultraviolet (UV) light is a short wavelength light invisible to the human eye. UV light is chemical free and can kill up to 99.9% of germs and bacteria.

Dual mode sanitisation: 3 minute Express Clean or 10 minute Deep Clean.

Safe: Safety switch feature ensures the UV Sanitiser can only be used when it is fully closed.

Multi-function: Sanitises all kinds of daily necessities including baby bottles, mobile phones, small tablets, jewellery, keys, masks, earphones, glasses, credit cards and more.


4.0 TECHNICAL SPECIFICATIONS

Product size (mm)	240 (W) x 190 (H) x 100 (D)
Input	3W
Output	2A
Power for sanitisation	3W
Maximum load bearing	12 KG
Number of LED lamps	6
Ultraviolet wavelength	253.7nm

5.0 PACKAGE CONTENTS

1. Sanitiser Bag x 1
2. USB Car Charger with USB Cable x 1
3. Instruction Manual x 1

6.0 PRODUCT OVERVIEW

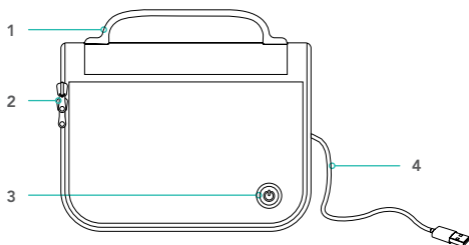

1. Bag Handle
2. Double Zipper
3. On/Off/Sanitise Button
4. USB Connector

7.0 HOW TO USE YOUR SOMATIK LABS SLS-UVB05

1. Un-zip and place the items (up to 220 x 190 x 70mm in size) that you want to sanitise into the bag.
2. Close the bag completely with the zipper.
3. Plug the large USB-A end of the charging cable into a 5V/2A USB-A wall charger, computer USB port or PowerBank USB port (Wall charger, computer and PowerBank not included).
4. There is also an option to use a 5V/2A USB car adaptor (Provided).
5. The Sanitise Mode Button will show solid white indicating the device is Powered ON.

6. For your safety, the SLS-UVB05 sanitiser comes with a built-in safety switch. If the bag is opened during the sanitising process, sanitising is paused and will resume after the bag is closed.
7. To save power the bag will go into Standby Mode if no operation is performed for more than 60 seconds.

PLEASE NOTE

Phones, devices, and other objects for sanitising must be clean of any dirt or debris to ensure they are properly sanitised. Only surfaces that are exposed to the UV light can be sanitised.

7.1 QUICK CLEAN - 3 MINUTE MODE

1. The Sanitise Mode button will show solid white indicating the device is Powered **ON**.
2. Quick press the Sanitise Mode button to start the Quick Clean process.
3. The Sanitise Mode button will start blinking white light for 3 minutes.
4. After the sanitising is complete, the Sanitise Mode button will turn to solid white.
5. The sanitise process can be canceled at any time during operation by pressing the Sanitise Mode button.

7.2 DEEP CLEAN - 10 MINUTE MODE

1. The Sanitise Mode button will show solid white indicating the device is Powered ON.
2. Long press the Sanitise Mode button to start the Deep Clean process.
3. The Sanitise mode button will start blinking blue for 10 minutes.
4. After the sanitising is complete, the Sanitise Mode button will turn to solid white.
5. The sanitise process can be canceled at any time during operation by pressing the Sanitise Mode button.

8.0 INBUILT SAFETY SWITCH

To protect your eyes and skin the inbuilt safety switch will pause sanitisation if the bag is opened during operation. Sanitising will resume after the bag is closed completely.

9.0 WARRANTY TERMS & CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics, will be borne by you.

Email: service@somatiklabs.com

Phone: +61 03 8331 4800

9.1 INDEMNITY

YOU AGREE TO DEFEND, INDEMNIFY AND HOLD HARMLESS SOMATIK LABS AND ITS SUBSIDIARIES AND AFFILIATES FROM AND AGAINST ANY AND ALL CLAIMS, PROCEEDINGS, INJURIES, LIABILITIES, LOSSES, COSTS AND EXPENSES (INCLUDING REASONABLE LEGAL FEES), INCLUDING BUT NOT LIMITED TO, CLAIMS ALLEGING NEGLIGENCE, INVASION OF PRIVACY, COPYRIGHT INFRINGEMENT AND/OR TRADEMARK INFRINGEMENT AGAINST SOMATIK LABS AND ITS SUBSIDIARIES AND AFFILIATES OR THE SOMATIK LABS SERVICES, RELATING TO OR ARISING OUT OF YOUR BREACH OF ANY PROVISION OF THESE TERMS, YOUR MISUSE OF THE SOMATIK LABS OR SOMATIK LABS SERVICES, OR YOUR UNAUTHORIZED MODIFICATION OR ALTERATION OF PRODUCTS OR SOFTWARE.

9.2 WARRANTY AND WARRANTY DISCLAIMER

SOMATIK LABS HAS A LIMITED WARRANTY ON WHEREBY SOMATIK LABS WARRANTS TO AND ONLY TO YOU THAT THE ON SOMATIK LABS MEDICAL DIAGNOSTIC AND UV-C SANITISATION DEVICES, INCLUDING TEMPERATURE THERMOMETERS, BLOOD PRESSURE MONITORS, UV-C SANITISERS AND UV-C SANITISING WANDS/CASES/TRAVEL BAGS WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR ONE (1) YEAR FROM THE DATE OF YOUR PURCHASE OF THE ON SOMATIK LABS MEDICAL DIAGNOSTIC AND UV-C SANITISATION DEVICES, INCLUDING TEMPERATURE THERMOMETERS, BLOOD PRESSURE MONITORS, UV-C SANITISERS AND UV-C SANITISING WANDS/CASES/TRAVEL BAGS (UNLESS A LONGER WARRANTY PERIOD IS REQUIRED BY

LAW). THE SPECIFICS OF THIS SOMATIK LABS LIMITED WARRANTY ARE AT [HTTPS://WWW.SOMATIKLABS.COM/WARRANTY](https://www.somatiklabs.com/warranty). TO THE EXTENT POSSIBLE UNDER GOVERNING LAW, OTHER THAN THE ABOVE PRODUCT WARRANTY FOR THE SOMATIK LABS MEDICAL DIAGNOSTIC AND UV-C SANITISATION DEVICES, INCLUDING TEMPERATURE THERMOMETERS, BLOOD PRESSURE MONITORS, UV-C SANITISERS AND UV-C SANITISING WANDS/CASES/TRAVEL BAGS, YOU UNDERSTAND AND AGREE THAT THE SOMATIK LABS SERVICES ARE PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. SOMATIK LABS MAKES NO WARRANTY THAT THE SOMATIK LABS PRODUCT AND SERVICES WILL MEET YOUR REQUIREMENTS OR THAT USE OF THE SOMATIK LABS SERVICES WILL BE UNINTERRUPTED, TIMELY, SECURE OR ERROR-FREE NOR DOES SOMATIK LABS MAKE ANY WARRANTY AS TO THE ACCURACY OR RELIABILITY OF ANY INFORMATION OBTAINED THROUGH THE SOMATIK LABS SERVICES (INCLUDING THIRD PARTY CONTENT), THAT ANY DEFECTS IN THE SOMATIK LABS SERVICES WILL BE CORRECTED OR THAT THE SOMATIK LABS PRODUCTS OR SOMATIK LABS SERVICES WILL BE COMPATIBLE WITH ANY OTHER SPECIFIC HARDWARE OR SERVICE. FURTHER, SOMATIK LABS DOES NOT WARRANT THAT THE SOMATIK LABS SERVICES OR THE SOMATIK LABS SERVERS THAT PROVIDE YOU WITH DATA AND CONTENT ARE FREE OF VIRUSES OR OTHER HARMFUL COMPONENTS. SOMATIK LABS ALSO ASSUMES NO RESPONSIBILITY FOR AND SHALL NOT BE LIABLE FOR ANY DAMAGES CAUSED BY VIRUSES THAT MAY INFECT YOUR SOMATIK LABS MEDICAL

DIAGNOSTIC AND UV-C SANITISATION DEVICES, INCLUDING TEMPERATURE THERMOMETERS, BLOOD PRESSURE MONITORS, UV-C SANITISERS AND UV-C SANITISING WANDS/CASES/TRAVEL BAGS, COMPUTER SOFTWARE, OR OTHER HARDWARE.

YOU AGREE THAT SOMATIK LABS IS NOT A PROVIDER OF MEDICAL SERVICES AND THAT SOMATIK LABS IS NOT PROVIDING ME WITH MEDICAL DIAGNOSIS OF ANY TYPE. IN THE EVENT OF ANY LOSS, DAMAGE OR INJURY, YOU WILL NOT LOOK TO SOMATIK LABS TO COMPENSATE YOU OR ANYONE ELSE. YOU RELEASE AND WAIVE FOR YOURSELF AND YOUR INSURER ALL SUBROGATION AND OTHER RIGHTS TO RECOVER AGAINST SOMATIK LABS ARISING AS A RESULT OF THE PAYMENT OF ANY CLAIM FOR LOSS, DAMAGE OR INJURY.

SOMATIK LABS'S EQUIPMENT AND SERVICES DO NOT CAUSE AND CANNOT ELIMINATE OCCURRENCES OF CERTAIN EVENTS, INCLUDING, BUT NOT LIMITED TO MEDICAL PROBLEMS OR MEDICAL INCIDENTS. SOMATIK LABS MAKES NO GUARANTEE OR WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, THAT THE SOMATIK LABS EQUIPMENT AND SERVICES PROVIDED WILL DETECT OR AVERT SUCH INCIDENTS OR THEIR CONSEQUENCES. SOMATIK LABS DOES NOT UNDERTAKE ANY RISK THAT YOU OR PROPERTY, OR THE PERSON OR PROPERTY OF OTHERS, MAY BE SUBJECT TO INJURY OR LOSS IF SUCH AN EVENT OCCURS. THE ALLOCATION OF SUCH RISK REMAINS WITH YOU, NOT SOMATIK LABS.

OTHER THAN THE ABOVE PRODUCT WARRANTY FOR THE SOMATIK LABS MEDICAL DIAGNOSTIC AND UV-C SANITISATION DEVICES, INCLUDING TEMPERATURE THERMOMETERS, BLOOD PRESSURE MONITORS, UV-C SANITISERS AND UV-C SANITISING WANDS/CASES/TRAVEL BAGS, SOMATIK LABS AND ITS SUPPLIERS DISCLAIM ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS, IMPLIED, OR STATUTORY, REGARDING THE SOMATIK LABS SERVICES, INCLUDING ANY IMPLIED WARRANTY OF TITLE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT OF THIRD PARTY RIGHTS. BECAUSE SOME JURISDICTIONS DO NOT PERMIT THE EXCLUSION OF IMPLIED WARRANTIES, THE LAST SENTENCE OF THIS SECTION MAY NOT APPLY TO YOU. SOMATIK LABS HEREBY FURTHER EXPRESSLY DISCLAIMS ALL LIABILITY FOR ANY CLAIMS FOR SERVICE FAILURES THAT ARE DUE TO NORMAL PRODUCT WEAR, PRODUCT MISUSE, ABUSE, PRODUCT MODIFICATION, IMPROPER PRODUCT SELECTION OR YOUR NON-COMPLIANCE WITH ANY AND ALL APPLICABLE FEDERAL, STATE OR LOCAL LAWS. THIS WARRANTY AND WARRANTY DISCLAIMER GIVE YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY BY STATE, PROVINCE, OR COUNTRY. OTHER THAN AS PERMITTED BY LAW, SOMATIK LABS DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU HAVE, INCLUDING THOSE THAT MAY ARISE FROM THE NONCONFORMITY OF A SALES CONTRACT. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR STATE, PROVINCE, OR COUNTRY. FOR OUR AUSTRALIAN CUSTOMERS: PLEASE NOTE THAT THIS WARRANTY

IS IN ADDITION TO ANY STATUTORY RIGHTS IN AUSTRALIA IN RELATION TO YOUR GOODS WHICH, PURSUANT TO THE AUSTRALIAN CONSUMER LAW, CANNOT BE EXCLUDED.

Engineered for your **well-being.**

DIRECTED.

All Images, Information and Content are Copyright
© 2020 Directed Electronics Australia Pty Ltd.
All Rights Reserved.

www.directed.com.au | www.directed.co.nz



www.somatiklabs.com